

SHARPER IMAGE®

NOISE CANCELLING BLUETOOTH HEADPHONES

Item No. 204952

Owner's Manual



Thank you for purchasing the Sharper Image Noise Cancelling Bluetooth Headphones. Please take a moment to read this Owner's Manual and store it for future reference.

PRODUCT SPECIFICATIONS

Bluetooth version: 4.1
Bluetooth chipset: CSR8645 w/apt-X
Noise cancellation rate: 85%
Speakers: 40mm Neodymium
Audio impedance: 320hm
Charging time: about 3.0 hours
Charging: Micro USB
BT operating range: ≥10 m
Connection: 3.5mm jack
Battery time [Bluetooth only]: 15 hours
Battery time [Noise cancelling only]: 30 hours
Battery time [Bluetooth + noise cancelling]: 12 hours
Battery Type: Li-Polymer
Dimensions: 21.0[L] × 16.0[W] × 8 [H] cm
[unfolded] 21.0[L] × 16.0[W] × 5 [H] cm [folded]
Weight: 238.6 g

PACKAGE CONTENTS

1. Headphone
2. Detachable Aux Cable
3. 1/4 inch Stereo-plug Adapter
4. Dual-plug Adapter [For Airline]
5. USB Charging Cable
6. Small Mesh Bag
7. Hard Shell Case
8. User Manual
9. Gift box



HEADPHONE OVERVIEW

LEFT SIDE

1. LED Indicator
[For Bluetooth, battery condition]
2. Multifunction Button (MFB)
*Switch ON/OFF, Pairing, Answer/End/
Reject Call/Next track [Only for Bluetooth]*
3. Microphone
4. USB Socket *[For Charging]*

RIGHT SIDE

5. Noise Cancelling LED Indicator
6. Noise Cancelling ON/OFF Switch
7. 3.5mm Audio Jack

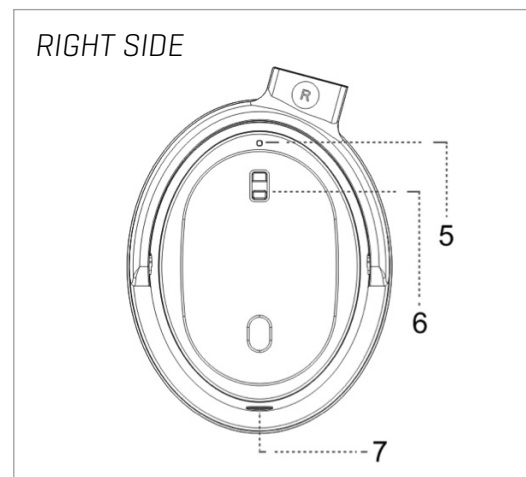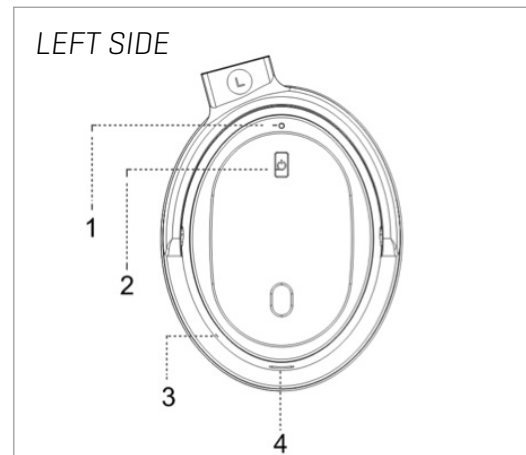

ADJUSTING THE HEADBAND

- In order to achieve maximum comfort and noise cancellation, the headband should be adjusted to properly fit your head with the ear cups sitting comfortably over your ears.

CHARGING THE HEADPHONES

Prior to use, charge your headphone unit by connecting the included charging cable into a USB power outlet [such as USB chargers or computer USB ports] and plug the other end into the headphone's micro USB charging port. The LED indicator [1] will light up red showing that the unit is being charged. When charging is complete, the red LED indicator [1] will turn off.

ACTIVE NOISE CANCELLING MODE

- To power ON the noise cancelling function, set the noise cancelling ON/OFF switch upwardly. The Noise Cancelling LED indicator [5] will light up in blue. *Note: After you turn ON the power, you might hear a slight hissing noise. This is a normal function and will cease after a few seconds.*
- When the battery is running low, the Noise Cancelling LED indicator [5] will become dim.
- Once the battery is fully drained, the active noise cancelling feature will turn off but the audio signal from the music player will continue to transmit.
- In quiet environments where noise cancellation is not required, these headphones can also be used like conventional headphones, without the use of battery.
- When not in use, switch the noise cancelling ON/OFF button downwardly to extend battery life.

BLUETOOTH MODE

Main Functions

1. **Power ON your headphone:** Press and hold the Multifunction Button [MFB] for about 3 seconds until the Bluetooth LED indicator [1] light starts flashing blue and red rapidly with an ascending sound.
2. **Power OFF your headphone:** Press and hold the MFB for about 5 seconds until the Bluetooth LED indicator [1] light turns solid red with a descending sound.

GETTING STARTED WITH YOUR NOISE CANCELLING BLUETOOTH HEADPHONES

To use your stereo Bluetooth headphone, please follow the steps below:

- a) Ensure your Bluetooth headphone is fully charged.
- b) Pair your charged Bluetooth headphone with a Bluetooth-enabled mobile phone prior to first use. Please fully charge your new headphone before first use.

PAIRING YOUR HEADPHONES

The headphone works with Bluetooth-enabled mobile phones. Prior to using and pairing your headphone for the first time, please check to make sure that your mobile phone is Bluetooth-enabled.

The pairing instructions for typical Bluetooth-enabled mobile phones are explained in "Pairing Your Headphone." The headphone pairing procedure may vary depending on the settings of your mobile phone. Please contact the manufacturer of your mobile phone or its agent for further information.

1. Press and hold the MFB for about 4 seconds until the Bluetooth LED indicator [1] flashes alternately between blue and red quickly. Now the headphones will enter into pairing mode.
2. Enable searching of nearby Bluetooth devices using the Bluetooth menu on your device.
3. Once the "BNC80" is found, you can now connect and pair. If your device prompts you for a password, please use "0000" - For more details, please refer to your device's owner manual.
4. When pairing is successful, the Bluetooth LED indicator [1] will flash blue every 4 seconds. If pairing is unsuccessful, please turn off the headphones and repeat the pairing steps.

After initial pairing is established, the headphone will automatically reconnect to the last paired device upon turning ON.

CALL-RELATED FUNCTIONS

Answer a call	Press MFB once to answer
End a call	Press MFB once again to end
Ignore a call	Hold MFB for 3 seconds
Swap calls between headphone and Smartphone	While speaking, press MFB for 3 seconds and a "beep" sound will be heard then release

MUSIC-RELATED FUNCTIONS

Play/Pause Music	Press down the MFB Button once to start playing music and press it again to pause your music
Next track	Press MFB twice briefly to next track

**The above functions may not be available for some devices. See your user manual for specific functionality/features available.*

USING THE 3.5MM AUDIO CABLE

3.5mm audio cable is included for use with multimedia devices that do not have Bluetooth capabilities. You may also use the audio cable if the battery is fully drained.

NOTE

- You are able to use both Noise Cancelling & Bluetooth Function simultaneously.
- You may notice there are no volume and track controls on the headphones. You can control the volume and tracks by your paired Bluetooth device. This headphone is a multifunction headphone unit. It can be used as a regular wired, active noise cancelling, or BT headphone.

TROUBLESHOOTING

If you are unable to connect your headphone and your mobile phone, please try the following:

- Ensure your headphone is turned OFF and properly charged.
- Ensure the headphone is properly paired with your mobile phone.
- Ensure the headphone is within a 10 meter range of your paired Bluetooth device and that there are no obstructions, such as walls or other electronic devices in between.
- Ensure your mobile phone's Bluetooth feature is activated. Please refer to your mobile phone user guide for specific instructions.
- To reset the default functions of the headphone, you can simply plug-in to recharge then disconnect.

SAFETY INSTRUCTIONS

- Always turn down the volume control before plugging the headphones into a sound source.
- Do not use these headphones where vehicular traffic is present, or in any other activity where a failure to hear surrounding sounds could be dangerous.
- Maintenance and service operations are only to be carried out by authorized dealers. Damage caused by manual modifications of the product is not subject to warranty.
- If the product is used for other purposes than originally intended, the product may suffer damage and will void the warranty.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using these headphones, especially for extended periods.
- Keep batteries out of reach of children.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call Customer Service at 1 (877) 210-3449.

SHARPER IMAGE®

The Sharper Image® name and logo are registered trademarks. Manufactured and marketed by Camelot SI, LLC under license.

©Sharper Image All Rights Reserved.