World's Most Automated
& Powerful Jewerly Cleaner

3-in-1 Ultrasonic & Triple Steam-Jet Cleaning
Action wtih UV Sanitizing Technology

Jewelry Sauna™




GEMORO®
The Sparkle Experts

U.S. Patent No. 0771,881

GEMORO JEWELRY SAUNA
COMPONENT IDENTIFICATION

1. Ultrasonic splash cover
2. Ultrasonic tank
3. Control panel:
   - A) Steam power indicator
   - B) Ultrasonic timer button
   - C) Ultraviolet UV timer button
   - D) Steam ready indicator
   - E) Timer display
4. Steam shield

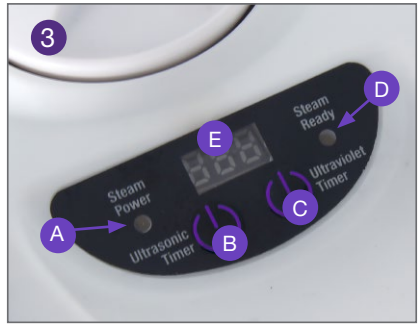



5. Horizontal handle for lifting steam shield up
6. Vertical handle for pulling steam shield down
7. Steam shield lip guide for ultrasonic basket
8. Ultrasonic basket
9. Steam residue and ultrasonic overflow tray
10. Steam 3 jet nozzle
11. Ultraviolet UV LED's
12. Blue LED illuminator
13. On/Off rear power switch
14. Power entry connector
15. Steamer fill cap and steamer tank fill hole
16. Steam activation lever
17. Small steam basket and rear storage hook
18. Tweezers and tweezers storage compartment



IMPORTANT SAFETY INSTRUCTIONS (SAVE THESE INSTRUCTIONS)

READ ALL INSTRUCTIONS BEFORE USING (THIS EQUIPMENT)

When using electrical appliances, basic safety precautions should be followed, including the following:

WARNING – To reduce the risk of fire, electric shock or injury:

- Make sure the voltage of your electrical system corresponds to the voltage shown on the back of the machine.
- Do not touch hot surfaces. Use handles when moving.
- To protect against fire, electrical shock and injury to persons, do not immerse cord, plug or appliance in water or other liquid.
- Keep the appliance out of the reach of children and do not leave the appliance unattended while in operation. Do not allow to be used as a toy.
- Unplug from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts and before cleaning.
- Do not pull or carry by cord, use cord as a handle, close a door on cord or pull cord around sharp edges or corners. Do not run equipment over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or equipment with wet hands.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to your supplier or the manufacturer for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in a fire, electrical shock or injury to persons.
- Do not use outdoors.
- Make sure the power cord does not hang over the edge of the table or countertop to avoid getting accidentally caught or entangled.

- Do not place the appliance or its electrical parts on or near electric stoves, cooking surfaces, or gas burners.
- Plug the cord into a wall outlet that provides the required amount of voltage to power the appliance. To disconnect, turn controls to “off,” then remove plug from wall outlet.
- Do not the use appliance for other than the intended use. This appliance may be used for domestic or commercial use. The manufacturer and its dealers decline all responsibility for any damage caused by improper, incorrect or irresponsible use.

INSTRUCTIONS FOR USE & SAFETY PRECAUTIONS

WARNING - To reduce the risk of electric shock, do not remove the appliance’s cover. No user serviceable parts are inside. Only authorized service personnel should perform possible repairs of this appliance!

INSTRUCTIONS FOR THE POWER SUPPLY CORD

- If a long extension cord is used with this appliance, the marked electrical rating should be at least as great as the electrical rating of the appliance; use genuine UL Listed type cords with a 3-prong grounding plug. Do not defeat the safety purpose of the grounding prong.
- Do not use a power strip with multiple outlets with this appliance; to do so will likely trip its circuit breaker.

Congratulations on your purchase of the GemOro Jewelry Sauna! The Jewelry Sauna has been factory tested for performance as well as safety, and does an incredible job cleaning and sanitizing jewelry via its 3-stage cleaning process using a professional grade ultrasonic, high-pressure steam, and UV sanitizing technology.

Please be aware that not all jewelry or other items may be cleaned in an ultrasonic cleaner or in a steam cleaner. Always confirm if the jewelry or other item may be cleaned in either an ultrasonic or with steam (or both) prior to cleaning it with the Jewelry Sauna.

INCLUDED PARTS

1. Steam fill cap
2. Ultrasonic splash cover
3. Ultrasonic basket
4. Steam residue / ultrasonic overflow tray
5. Small steam basket
6. Tweezers
7. Measuring fill cup
8. Funnel



SPECIFICATIONS

Power Voltage: 110-120V AC
Rated Frequency: 60Hz Rated
Power: 1000W
Pressure: 0-55PSI x 3 Steam Jets = 165 Total PSI
Maximum Steamer Tank Water Fill Capacity:
9oz (4.5oz + 4.5oz fill cups)
Maximum Ultrasonic Tank Water Fill Capacity:
Approximately 9oz (approximately 4.5oz + 4.5oz fill cups or to MAX fill line marked on rear side of tank)



QUICK START SETUP GUIDE

DO NOT PLUG IN YET!

1. Place the Jewelry Sauna on the steam residue / ultrasonic overflow tray.
2. Carefully unscrew the white fill cap.
3. Fill the measuring cup with water to the indicated 4.5oz mark (4.5oz + 4.5oz fill cups maximum water capacity). Place the funnel in the water fill hole where the fill cap was positioned.
4. Slowly pour water into the funnel opening. **BE CERTAIN TO NEVER OVERFILL THE TANK.** Always make sure to dry any excess water within the funnel area before replacing the cap.





5. After sufficient water has been poured into the steamer tank, replace the white steamer fill cap by hand tightening. **Do not over-tighten.**

6. With the steam shield down and the ultrasonic basket removed, insert the funnel into the ultrasonic tank. While holding the funnel in place, pour water into the tank and fill it to the MAX fill mark noted in the rear of the ultrasonic tank. For enhanced cleaning, add a Sparkle Pak Plus ultrasonic cleaning solution packet to the water.
7. **Insert the ultrasonic basket into the ultrasonic tank while being certain to properly position the edge of the basket onto the lip of the steam shield.**
8. Plug the Jewelry Sauna into a grounded electrical outlet.
9. Flip the switch located on back side of the Jewelry Sauna from the "O" mark to the "|" mark. The Steam Power indicator will illuminate.
10. Remove the tweezers from the top storage compartment.

HOW TO USE THE JEWELRY SAUNA

1. Ⓐ Place jewelry into the basket and insert the basket into the full ultrasonic tank while resting the edge of the basket on lip of the steam shield.
2. Ⓑ Press the Ultrasonic Timer button repeatedly to scroll to the available cleaning times of 180 and 360 seconds (3 and 6 minutes).
3. Once the desired cleaning time has been determined, **please note that there is a delayed time of approximately 3 seconds before the ultrasonic will automatically begin operating.** Depending on the amount of dirt on the jewelry, repeating this cycle may be necessary to achieve the desired results.
4. When the ultrasonic cleaning cycle has ended, while using your fingers to apply a downward pressure on the top of the Jewelry Sauna for leverage, Ⓒ grasp the bottom horizontal lifting handle on the steam shield and slide it up until it firmly locks into place to the rim of the steam chamber. **IMPORTANT: When the steam shield is securely locked into place you will hear a "clicking sound" indicating that it has been closed correctly.**
5. Ⓓ Press the steam lever down repeatedly to apply 1-2 second bursts of steam to the jewelry in the basket. Typically, all that is required is to do this 3-4 times.


A


B
Steam Power
Ultrasonic Timer
Steam Ready
Ultraviolet Timer


C


D


E

6. To activate the ultraviolet (UV) function, with the basket still locked onto the roof of the steaming chamber, press the Ultraviolet Timer button repeatedly to scroll to the available sanitizing times of 180 and 360 seconds (3 and 6 minutes). The longer the ultraviolet function is used, the the better the results will be. **Please note that there is a delayed time of approximately 3 seconds before the ultraviolet lights will begin operating.**
7. Ⓔ Grasp and pull down on the vertical handle on the front of the shield and slide the steam shield down. Wait approximately 30-60 seconds for the basket to sufficiently cool.
8. While being aware that the basket will still be warm, carefully touch one of the plastic side grip pads to confirm if it is cool enough to grasp. Grasp the left and right side of the basket by its plastic grip pads and with a downward motion pull the basket off from the roof of the steam chamber.
9. Remove the sparkling jewelry from the basket with the tweezers or pour the jewelry from the basket onto a dry towel and hand dry or allow to air dry.

USING STEAMER INDEPENDENTLY

1. With the steam shield down and the ultrasonic tank empty, place the ultrasonic splash cover Ⓕ onto the ultrasonic tank.
2. Hold jewelry with tweezers or place jewelry in the small basket and position it under the steam nozzle.
3. Press the steam lever down repeatedly to apply 1-2 second



bursts of steam to the jewelry in the tweezers or basket. Typically, all that is required is to do this 3-4 times.

4. Remove the sparkling jewelry from the tweezers or pour the jewelry from the basket onto a dry towel and hand dry or allow to air dry.

USING ULTRASONIC INDEPENDENTLY

1. Place jewelry into the basket and insert the basket into the full ultrasonic tank while resting the edge of the basket on lip of the steam shield.
2. Press the ultrasonic timer button repeatedly to scroll through the available cleaning times of 180 and 360 seconds (3 and 6 minutes).
3. Once the desired cleaning time has been determined, **please note that there is a delayed time of approximately 3 seconds before the ultrasonic will automatically begin operating.**
4. The ultrasonic will automatically turn itself off when the cleaning cycle has been completed.
5. Depending on the amount of dirt on the jewelry, repeating this cycle may be necessary to achieve the desired results.

USING ULTRAVIOLET (UV) FUNCTION INDEPENDENTLY

1. Place jewelry into the basket and with the steam shield down, position the basket in the steaming chamber under the steam nozzle.
2. Lock basket onto the roof of the steaming chamber.
3. Press the Ultraviolet Timer button repeatedly to scroll through the available sanitizing times of 180 and 360 seconds (3 and 6 minutes).
4. Once the desired sanitizing time has been determined, **please note that there is a delayed time of approximately 3 seconds before the ultraviolet lights will automatically begin operating.**
5. The longer the ultraviolet function is used, the better the results will be.
6. The ultraviolet lights will automatically turn themselves off when the sanitizing cycle has been completed.

WHEN IT BECOMES NECESSARY TO REFILL STEAMER

1. Turn the unit off by flipping the power switch located on the rear center bottom of the Jewelry Sauna to the “0” position.
2. Unplug it from the power outlet.
3. With the steam shield down, remove the ultrasonic basket.
4. You must first drain the ultrasonic tank by lifting the appliance by holding both sides of the unit and position it over a sink. **DO NOT LIFT THE UNIT BY ITS STEAM ACTIVATION LEVER.**
5. Tilt the appliance to the side, and in a quick motion pour the water from the ultrasonic tank into the sink.
6. If the steam tank is hot, allow sufficient cooling time of approximately 30 minutes prior to refilling the tank. As a safety feature, the white fill cap cannot be removed until it has sufficiently cooled.
7. While maintaining an arm’s length distance from the Jewelry Sauna slowly unscrew the white fill cap.
8. As you are unscrewing the fill cap the remaining pressure if present will release from around it. Press down on the steam activation lever to more quickly release the remaining steam in its tank. Remove the white fill cap.
9. **IMPORTANT: Before refilling the steamer tank, you must first fully drain any remaining water in its tank so as not to overfill it. WARNING: OVERFILLING THE STEAMER TANK WILL PRODUCE A POTENTIALLY HAZARDOUS SPUTTERING OF WATER AND WET STEAM UNTIL THE WATER LEVEL IN THE STEAMER TANK HAS BEEN REDUCED TO THE CORRECT LEVEL SO STEAM MAY BE PRODUCED.** While holding the appliance over the sink, tilt the appliance backwards and hold it upside down to drain any remaining water that may still be in the tank.
10. Fill the measuring cup with water to the indicated 4.5oz mark (4.5oz + 4.5oz fill cups maximum water capacity). Place the funnel in the water fill hole where the fill cap was positioned.
11. Slowly pour water it into the funnel opening. Always be certain to dry any excess water within the funnel area before replacing the cap.

12. After sufficient water has been poured into the steamer tank, replace the white steamer fill cap by hand tightening. **Do not over-tighten.**

PRECAUTIONS & WARNINGS

1. The Jewelry Sauna is specifically designed for cleaning jewelry. Although there are many other cleaning applications for the appliance (such as for cleaning dentures, eye glasses, hand tools, small parts, etc.), caution and common sense should be used at all times as the steam or ultrasonic could damage the item and/or the operator.
2. **USE CAUTION: The steam cleaner releases very hot steam under high pressure. Never touch the steam nozzle, the area surrounding it or the white fill cap, as you may get burnt.**
3. The Jewelry Sauna's ultrasonic will clean well with regular tap water. However, for best results use a combination of a professional ultrasonic cleaning solution mixed with tap water. We recommend the Sparkle Pak Plus® (see below).
4. Never place items to be cleaned in the ultrasonic directly on the bottom of the ultrasonic tank. Use the supplied basket or tweezers to suspend the jewelry in the water above the bottom. Note: the small handheld basket should be suspended in the water or placed in the ultrasonic basket within the tank and not placed directly on the tank bottom.
5. Never operate the Jewelry Sauna's ultrasonic without sufficient water in its tank.
6. Be certain that the white fill cap with its built-in safety release valve is screwed on by hand prior to use. Do not over-tighten. Never operate the Jewelry Sauna steam cleaner without the fill cap properly installed.
7. The Jewelry Sauna steam cleaner may only be used with regular tap water or distilled water. **Never add any type of chemicals or cleaning agents to the water in the tank prior to steaming.**
8. The Jewelry Sauna steam cleaner is designed to operate with a maximum of 9oz of water in its tank. **WARNING: OVERFILLING THE STEAMER TANK WILL PRODUCE**

A POTENTIALLY HAZARDOUS SPUTTERING OF WATER AND WET STEAM UNTIL THE WATER LEVEL IN THE STEAMER TANK HAS BEEN REDUCED TO THE CORRECT LEVEL SO STEAM MAY BE PRODUCED.

9. **Always dry all excess water from within the funnel area prior to replacing the white fill cap. Any excess remaining water in the funnel area will boil out from around the fill cap (giving the appearance that the tank is leaking) until it has all evaporated. Never touch this boiling water or you may get burnt.**
10. Never plug in and attempt to operate the Jewelry Sauna steamer without water in its tank.
11. Never attempt to unscrew the white fill cap and refill the Jewelry Sauna steam tank while it is still hot and under pressure.
12. Always turn off and unplug the Jewelry Sauna when not in use.
13. **DO NOT LIFT THE UNIT BY ITS STEAM ACTIVATION LEVER.**
14. This appliance is not for space heating purposes.
15. **DO NOT IMMERSE IN WATER.**
16. **FOR INDOOR USE ONLY**

⚠ MAINTENANCE

Your Jewelry Sauna is designed to be a very low maintenance appliance.The durable polycarbonate housing and plastic steam shield portion of the appliance may be cleaned by hand using a soft cloth and a mild household cleaner that is suitable to be used on plastic. The ultrasonic tank may be cleaned with any household cleaner that is designed to safely clean stainless steel. Wipe dry using a soft cloth when finished.

SYMBOLS USED IN THESE INSTRUCTIONS

Important warnings are identified by these symbols. These warnings must be respected.
Failure to observe the instructions could result in electric shock, serious injury, burns, fire or damage to the appliance.

DANGER!
Failure to observe the warning could result in possibly life threatening injury from electric shock.

IMPORTANT!
Failure to observe the warning could result in injury, damage to the appliance or damage to your jewelry.

DANGER OF BURNS!
Failure to observe the warning could result in injury.

IMPORTANT - READ BEFORE CLEANING ANY TYPE OF JEWELRY

Prior to using the Jewelry Sauna, always confirm if the jewelry in question may be cleaned either in an ultrasonic and/or steam cleaner. While some general guidelines are noted below for what may or may not be cleaned in an ultrasonic or steam cleaner, the guidelines are not represented as being complete and are not meant to be used as your final determination as to whether or not the jewelry in question is suitable for being cleaned by the Jewelry Sauna. Before cleaning any piece of jewelry or gemstone, you should consult with a professional to correctly identify the item you desire to clean and confirm that it is suitable to be cleaned in and by an ultrasonic or steam cleaner. GemOro disclaims, to the maximum extent permissible, (a) any responsibility for damage to jewelry or any other item, and (b) any responsibility for direct, special, incidental or consequential damages under any legal theory. For more information on jewelry care and cleaning, or assistance with finding qualified professionals with whom you may consult regarding the potential cleaning of your jewelry, visit the following jewelry industry websites:

American Gem Society (AGS)
Guide to Fine Jewelry Care
http://www.ags.org

Gemological Institute of America (GIA)
http://www.gia.edu/

Jewelers of America (JA)
http://www.jewelers.org/

Never place items to be cleaned directly on the bottom of the ultrasonic tank. To do so will void the warranty. Rather, to prevent damage to the tank, its transducer or the item being cleaned, always suspend items in the ultrasonic tank or use the provided baskets or tweezers that are designed for the task.

Always inspect the setting for loose stones prior to cleaning. Stones that are insecurely set may fall out when cleaned in an ultrasonic or by a steam cleaner. Prior to cleaning, carefully touch the stone with a small probe (like a toothpick); the stone should not shift or wiggle. If a stone falls out as a result of being cleaned in an ultrasonic or by a steam cleaner, please be aware that the stone would have eventually fallen out anyway. Most consider it better to have a stone fall out in a reasonably controlled environment as opposed to at random while wearing it.

THE FOLLOWING TYPES OF JEWELRY SHOULD ONLY BE CLEANED BY A KNOWLEDGEABLE PROFESSIONAL:

- **Antique jewelry**
- **Enamel jewelry**
- **Paste jewelry (which is common with costume jewelry)**
- **Costume jewelry**
- **Jewelry containing stones that have been set with glue**
- **Jewelry containing micro-pave set stones**

PRELIMINARY GUIDELINE FOR GEMSTONE CLEANING			
GEMSTONE	TOUGHNESS	STEAM	ULTRASONIC
Alexandrite	excellent	usually	usually
Amazonite	poor	never	never
Amber	poor	never	never
Amethyst	good	risky	usually
Aquamarine	good	usually	usually
Citrine	good	risky	usually
Coral	fair	risky	risky
Diamond	good	usually	usually
Emerald	poor	never	never
Garnet	fair	never	usually
Iolite	fair	risky	risky
Lapis Lazuli	fair	never	risky
Opal	fair	never	never
Pearl	good	never	never
Peridot	fair	never	risky
Ruby	excellent	usually	usually
Sapphire	excellent	usually	usually
Spinel	good	usually	usually
Tanzanite	fair	never	never
Topaz	poor	never	never
Tourmaline	fair	risky	risky
Turquoise	fair	never	never
Variscite	fair	never	never
Zircon	fair	risky	risky

WARRANTY

Congratulations on your purchase of the GemOro Jewelry Sauna, the premier jewelry cleaning system for the home! Your Jewelry Sauna features a ONE YEAR LIMITED REPLACEMENT WARRANTY from the date of its purchase by filling out the on-line WARRANTY REGISTRATION FORM at www.gemoroproducts.com/warrantyregistration. In the event the Jewelry Sauna is no longer available or has been discontinued and warranty coverage is applicable, at the factory's sole discretion, an equivalent jewelry cleaning appliance may be substituted in place of the defective Jewelry Sauna. The purchaser shall incur the cost for return postage, insurance and handling for all warranty and non-warranty repairs. Warranty repairs and/or replacement(s) will be shipped back to the customer FOB Destination to the location of the customer's choosing if located within the Continental United States. Non-warranty repairs will be shipped back to the customer FOB Factory. Should the customer require the repair and/or replacement unit(s) to be shipped outside the Continental United States, the customer will be required to pay any related shipping charges and any related taxes/duties for the respective destination country.

GemOro Jewelry Sauna Warranty Registration
10455 Olympic Drive, Dallas, Texas 75220 USA
Tel 800.527.0719 or 214.351.0380 Fax 800.832.9871 or 214.351.1903
www.sparkleexperts.com www.gemoroproducts.com
email: sales@sparkleexperts.com or support@sparkleexperts.com

GemOro Sparkle Pak Plus®

ULTIMATE JEWELRY CLEANER

CONSUMER HOME-USE FORMULA
IN PRE-MEASURED PACKETS



- For personal-use with ultrasonics, sonics, spray bottle and soak-bath cleaning.
- Instantly cleans platinum, gold, silver, metal watch bands, base metal, diamonds, gemstones, fine jewelry, fashion or costume jewelry, and more.
- Includes 10 packets of super-concentrated jewelry cleaner. Combined with water, makes almost 2 gallons of solution for you to use and reuse in a variety of applications!

Box of 10 Item #0937
List Price $11.95 **$9.95**

GemOro Sparkle Wand™

ON-THE-GO JEWELRY CLEANER

Remove cap, twist to wet brush and rub on diamonds and jewelry. Rinse off and dry. Instantly cleans and maintains the like-new sparkle of your diamonds, rubies, emeralds, sapphires, plus restores the luster of gold, silver and platinum like magic. Safe for ALL jewelry.

Item #091S List Price $11.95 **$9.95**





GemOro SparkleSpa®
PERSONAL ULTRASONIC CLEANER

Cleans quickly and easily with powerful, yet gentle ultrasonic waves!

- No scrubbing or polishing required - cleans in only minutes
- 3 Programmable cleaning cycles - 3, 5 and 10 minutes
- Includes a removable basket and bracelet / watch holder
- 1 Year limited replacement warranty

Item #1783 List Price $69.95 **$49.95**



GemOro Sparklette® PERSONAL ULTRASONIC CLEANER

Cleans quickly and easily with powerful, yet gentle ultrasonic waves!

- No scrubbing or polishing required - cleans in only minutes
- 3-minute automatic timed cleaning cycle
- Touch sensor power button
- Transparent evaporation-free cover with mother-of-pearl style handle
- Removable basket and multi-use watch / bracelet / earring holder included
- Includes a removable basket and bracelet / watch holder
- 1 Year limited replacement warranty

Item #1789

List Price $69.95

$49.95



GemOro BrilliantSpa®

BLACK DIAMOND

DELUXE PERSONAL JEWELRY STEAM CLEANER

- Professionally cleans diamonds, gold, silver and platinum jewelry
- Perfect size approximate 1-pint tank capacity steam cleaner
- Powerful steam cleaner safely generates a robust 50PSI of pressurized steam
- Using regular tap water safely blasts away dirt, grime, body oil, makeup and more
- Advanced LED indicator lights show when unit is heating and when it is ready to steam
- Bright blue LED light illuminates jewelry while being steam cleaned
- Features an unrestricted cleaning zone, removable cleaning / drying basket and convenient on / off power switch
- Includes jewelry holding tweezers, basket, steam residue mat and water funnel with measuring fill cup
- Complements sister product: GemOro Sparkle Spa Pro® Personal Ultrasonic Jewelry Cleaner
- Designed in the USA with European flair
- Built for safety – ETL Listed
- 2 Year limited replacement warranty

Black Item #0362

Slate Item #0375

Red Item #0366

List Price $149.95

$99.95



GemOro SparkleSpa Pro®

PRESTIGE SERIES PERSONAL ULTRASONIC CLEANER

· True professional grade ultrasonic jewelry cleaner for the home
· Approximate 25oz (750ml) tank capacity
· Powerful 42,000Hz energy producing sound waves per second
· Digital timer
· Auto shut-off function - 5 Cleaning cycles
90, 180, 280, 380 and 480 seconds
· Safely cleans most jewelry using regular tap
water (for best results use GemOro SparklePak
Plus solution Item #0937 sold separately)
· Bright blue LED illuminated stainless steel tank · Auto-
opening transparent evaporation-free cover
· Quiet solid-state circuitry
· Elegant black European contoured design with chrome accents
· Removable basket and bracelet / watch holder included
· 50 / 60Hz
· 1 Year limited replacement warranty

Black Item #1790 Slate Item #1791

List Price $79.95 **$59.95**







10455 Olympic Drive, Dallas, Texas 75220 USA
Tel 800.527.0719 or 214.351.0380
Fax 800.832.9871 or 214.351.1903
www.sparkleexperts.com
www.gemoroproducts.com
sales@sparkleexperts.com
support@sparkleexperts.com